




## BATHROOM DIY PROJECT

### PRIMER HAS A MILDEW RESISTANT PRIMER FINISH

#### SUPPLYLIST

- Primer: KILZ® Kitchen & Bath
- Paint: KILZ Complete Coat®
  - Walls – White RJ110
  - Cabinets – Soothing Ocean RD160-01
- 3/8"-1/2" Nap Paint Roller
- Paint Brush
- Drop Cloth
- Tape
- Damp Cloth
- Can Key
- Stir Stick

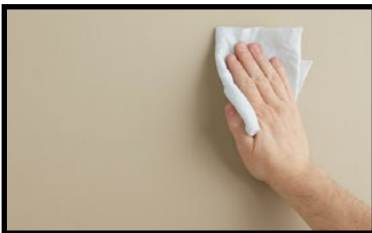

#### WALLS

- 1** Wipe down walls with a damp cloth to ensure they are clean and free of dust. Allow to dry.




- 2** Tape around the vanity frame and countertop edges with painter's tape to ensure you don't get primer or paint where you don't want it!



- 3** To ensure a mildew resistant primer coat, apply 1 coat of KILZ® Kitchen & Bath (stirring thoroughly before and occasionally during use) to the walls and allow to dry. Apply primer using a brush first to "cut in" around the edges, then use a roller to fill in.



- 4** Once primer is dry, apply KILZ Complete Coat® in White using the same application method as the primer (using a brush first to cut in around the edges 4 to 6 feet at a time, then use a roller to fill in those sections before moving along).

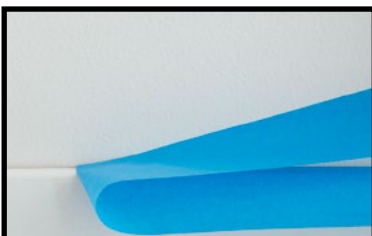

- 5** Remove the tape before the paint is fully dry.

*Always remember to refer to our website [kilz.com](http://kilz.com) or product back labels for additional information on which primer is right for your project and detailed instructions on how to apply our products.*