



## BEDROOM DIY PROJECT PRIMER SEALS AND BLOCKS STAINS

### SUPPLYLIST


- Primer: KILZ® Original
- Paint: Magnolia Home by Joanna Gaines® Interior Paint
- Walls – Pearly Cotton MAG041
- 3/8"-1/2" Nap Paint Roller
- Paint Brush
- Drop Cloth
- Tape
- Damp Cloth
- Can Key
- Stir Stick




- 1** Wipe down walls with a damp cloth to ensure they are clean and free of dust. Allow to dry.



- 2** Tape around the baseboards and moldings with painter's tape to ensure you don't get primer or paint where you don't want it!

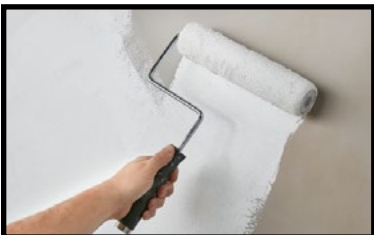

- 3** To seal and block smoke stains and odors, apply 1 coat of **KILZ® Original** (stirring thoroughly before and occasionally during use) to the walls and allow to dry. Apply primer using a brush first to "cut in" around the edges, then use a roller to fill in.

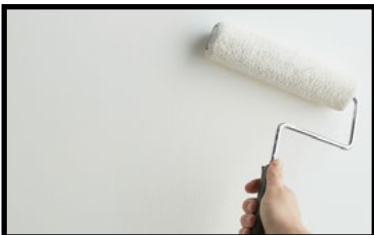

- 4** Once primer is dry, apply **Magnolia Home by Joanna Gaines® Interior Paint** in Pearly Cotton using the same application method as the primer (using a brush first to cut in around the edges 4 to 6 feet at a time, then use a roller to fill in those sections before moving along).



- 5** Remove the tape before the paint is fully dry.

*Always remember to refer to our website [kilz.com](http://kilz.com) or product back labels for additional information on which primer is right for your project and detailed instructions on how to apply our products.*