



## KITCHEN DIY PROJECT

# PRIMER MAKES YOUR PAINT JOB DURABLE

### SUPPLYLIST

- Primer: KILZ® 3 Premium
- Paint: Magnolia Home by Joanna Gaines® Trim & Cabinetry Interior Semi-Gloss
  - Lower Cabinets – Silos District MAG120
  - Upper Cabinets – True White MAG008
- 3/8"-1/2" Nap Paint Roller
- Paint Brush
- Drop Cloth
- Tape
- Damp Cloth
- Can Key
- Stir Stick
- Screwdriver
- 100-150 Grit Sandpaper
- 180-220 Grit Sandpaper




- 1** Using a screwdriver, remove all cabinet handles and then remove the cabinet doors and drawers from the cabinet frame. As you move along, we recommend putting each screw back into its respective hardware piece, sealing it together with painter's tape and labelling it. You'll ensure the least amount of stress on the wood by putting each screw back exactly where it came from when the priming and painting is done!



- 2** Sand the surfaces of the doors, drawer faces and cabinet frame. Do a first pass with 100-150 grit sandpaper then finish with a second pass of 180-220 grit sandpaper, always moving the sandpaper in the direction of the wood grain.




- 3** After sanding, wipe down all sanded surfaces with a damp cloth to remove any dust or residue and allow to dry. Next, tape around the cabinet body to protect any areas you don't want to get primer or paint on.

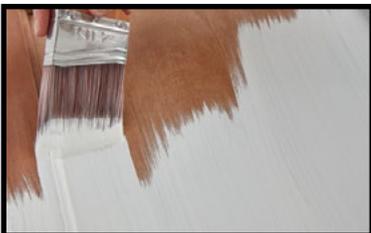

- 4** Apply KILZ® 3 Premium primer to the cabinet doors and frame using a brush, stirring the primer thoroughly before and occasionally during use. Allow 1-hour dry time.

**PRO TIP:** KILZ 3 Premium is a great primer choice for kitchen cabinets as it offers exceptional adhesion and durability. KILZ 3™ Premium also ensures a mildew resistant primer coat, great for moisture prone areas like kitchens, bathrooms and laundry rooms.

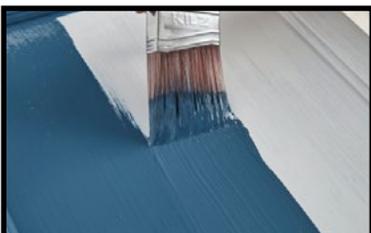

- 5** Once your primer is dry, apply **Magnolia Home by Joanna Gaines® Trim & Cabinetry Interior Semi-Gloss Paint** in Silos District to the lower cabinets and True White to the upper cabinets. Apply the paint with a brush, moving in smooth strokes in the same direction as the wood grain. Remove the painter's tape before the paint is fully dry.
- 6** Once paint is dry, reattach hardware to doors and then reattach doors to cabinets.

*Always remember to refer to our website [kilz.com](http://kilz.com) or product back labels for additional information on which primer is right for your project and detailed instructions on how to apply our products.*